

Mammoth Designs

1473 Hillsboro Rd. Flemingsburg, KY 41041
606-845-5683

Instructions for Installation and Care of Polaris Ranger Windshield/Top Combo


Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.


1. Be sure to read these instructions thoroughly before opening and installing the Polaris Ranger Cab Enclosure. The installation is best done when the temperature is 70 degrees F. or warmer.
2. Carefully open the carton and remove the rolled up Cab Enclosure on a large flat surface that is clean and free of dirt or other material that may soil or scratch the windows of the Cab.
3. It will help to unhook the hood prior to installing the cab enclosure
4. Check over the parts included in the carton with the parts list shown below:

Velcro Hook strips:	4 each	5" long
“ “	3 each	10" long
“ “	1 each	16" long
“ “	2 each	6" long
Cab Enclosure	1 each	
5. Loosely drape the Cab Enclosure over the Ranger roll cage. Note the correct position for the 16" Velcro Hook strip on the underside of the front edge of the Ranger hood. **Clean the area with Isopropyl alcohol**, let dry and apply the Velcro hook strip. Then attach the Cab to the strip under the Hood. As shown in photo below:



6. Working your way to the rear of the roll cage, pull the rear corners down to determine the correct positions to place the 6" adhesive Velcro strips around the roll bars. The photos below show the correct way to attach the double-sided Velcro.

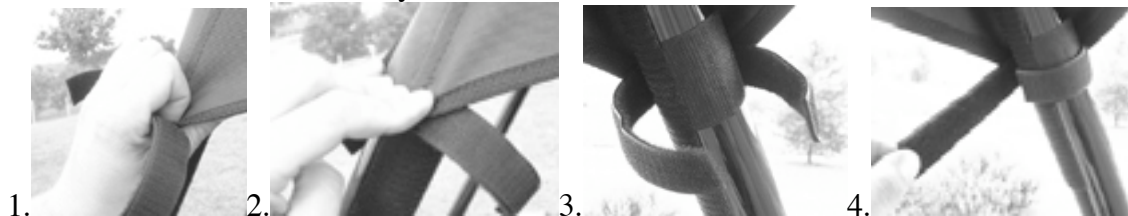

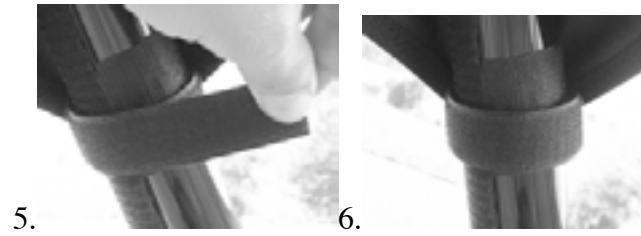

7. Note the position and install two 10" and one 5" hook and loop strips on the left side of the roll cage for the front window. Be certain to clean the surfaces before applying the adhesive hook strips! First, apply all three strips on one side of the roll cage and attach the unit. Next note the placement and install one 10" and three 5" hook and loop on the right side of the roll cage for the front window. Pull the window tightly toward the right side to minimize waviness or wrinkles in the front window and attach.

Cleaning and Storage Recommendations:

1. Before removing the Mammoth Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.
3. A special cleaner conditioner is available from Mammoth Designs that will greatly increase the service life of the Cab Enclosure. In addition, if additional hook and loop sets are needed, they can also be ordered.