

# Mammoth Designs

## Instructions for Installation and Care of Chuck Wagon Full Cab Enclosure to Fit Factory Folding Windshield


**Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.**

1. Be sure to read these instructions thoroughly before unrolling and installing the Mammoth Designs Chuck Wagon Cab Enclosure. The installation is best done when the temperature is 65 degrees F. or warmer.
2. Carefully unroll the Cab Enclosure on a large flat surface that is clean and free of dirt or other material.
3. Check over the parts included in the carton with the parts list shown below:

Velcro Hook strips:	2 each	-----	8" long
“ “	2 each	-----	14" long
“ “	2 each	-----	12" long
“ “	10 each	-----	6" long
“ “	1 each	-----	42" long
“ “	2 each	-----	4" long
Cab Enclosure	1 each		
4. Before installing the enclosure you must first remove the folding windshield since the Velcro tabs are to be placed under it and around the roll cage.
5. Loosely drape the Cab Enclosure over the Chuck Wagon roll cage. Starting with the Velcro tabs along the front edge of the cab. Work you way down, marking the proper locations with a china marker or crayon. Next apply the adhesive Velcro strips to the roll cage, being sure to clean the area well first. Below is a photo showing where the different size strips should be placed.



6. At the top of the front area and toward the bottom, you will notice strips of double sided Velcro. You will use the provided 6" adhesive hook strips with these. Below are photos showing how to attach these.

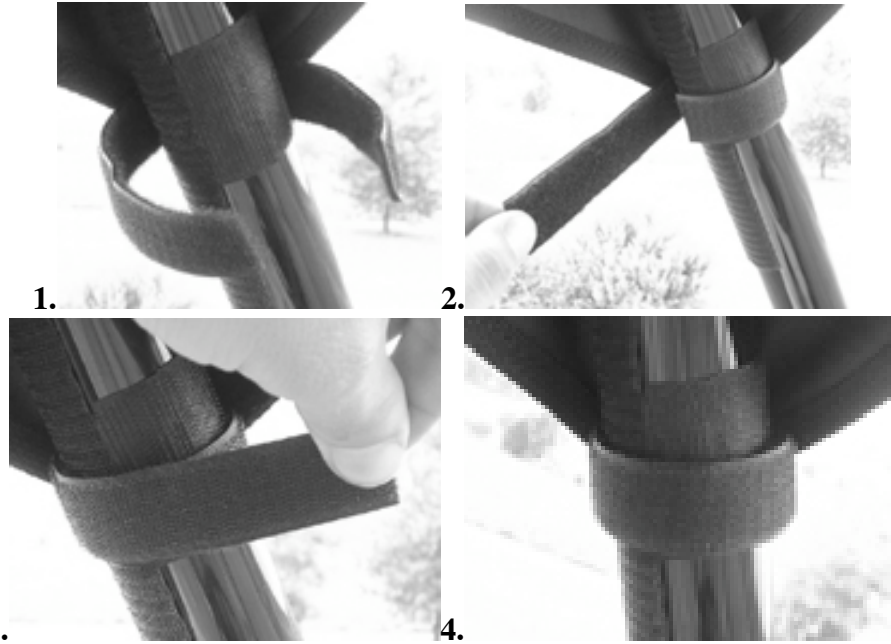

7. Working your way to the rear of the roll cage carefully fit the Cab into position. Be sure to pull the lower edge of the rear panel down between the rear of the roll cage and the front of the dump bed. Apply the four 6" latch strips here. Be certain to clean the surfaces before applying the adhesive loop strips!
8. Now you can reattach the folding windshield. The remaining 42" adhesive hook strip should be attached along the entire top edge of the windshield. Once in place you can pull the top of the cab over the top lip of the windshield, fully enclosing the cab.



9. To open and stow the doors, move the zipper fully rearward and fold the bottom portion of the doors up. Then begin to form a vertical roll with the door by rolling it inward from the front edge toward the rear of the door. Secure in place using the two hook and loop straps provided. Try to form a roll approximately 2" in diameter to assure that the door will not stick out very far while stowed.

#### Cleaning and Storage Recommendations:

1. Before removing the Mammoth Designs Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag (I recommend a Flannel or Micro Fiber Cloth) or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.
3. A special cleaner conditioner is available from Mammoth Designs that will greatly increase the service life of the Cab Enclosure. In addition, if additional hook and loop sets are needed, they can also be ordered.